
SECTION 9A

BODY WIRING SYSTEM

CAUTION: Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in LOCK unless otherwise noted.

TABLE OF CONTENTS

Schematic and Routing Diagrams	9A-1	Front Harness Routing	9A-10
Wire Color Chart	9A-1	Rear Harness Routing	9A-11
Power Distribution Schematic	9A-3	Floor Harness Routing	9A-12
Connection Box Harness Routing	9A-7	Left-Hand Drive Instrument Harness Routing	9A-13
Fuse Block Locator (Engine)	9A-8	Right-Hand Drive Instrument Harness Routing	9A-14
Fuse Block Locator (Passenger Compartment)	9A-8	Door Harness Routing	9A-15
Fuse Chart	9A-9		

SCHEMATIC AND ROUTING DIAGRAMS

WIRE COLOR CHART


Wire Color	Abbreviation On Schematic
Green	DK GRN
Light Green	LT GRN
Blue	DK BLU
Brown	BRN
Orange	ORN
Yellow	YEL
Grey	GRY
Sky Blue	LT BLU
Red	RED
Black	BLK
Pink	PNK
White	WHT
Purple	PPL

9A - 2 BODY WIRING SYSTEM

Wires With Tracers


Wire Color	Abbreviation On Schematic
Red with White Tracer	RED/WHT
Red with Black Tracer	RED/BLK
Brown with White Tracer	BRN/WHT
Black with White Tracer	BLK/WHT
Black with Yellow Tracer	BLK/YEL
Green with Black Tracer	DK GRN/BLK
Green with White Tracer	DK GRN/WHT
Light Green with Black Tracer	LT GRN/BLK
Red with Yellow Tracer	RED/YEL
Red with Blue Tracer	RED/DK BLU
Black with Brown Tracer	BLK/BRN

POWER DISTRIBUTION SCHEMATIC

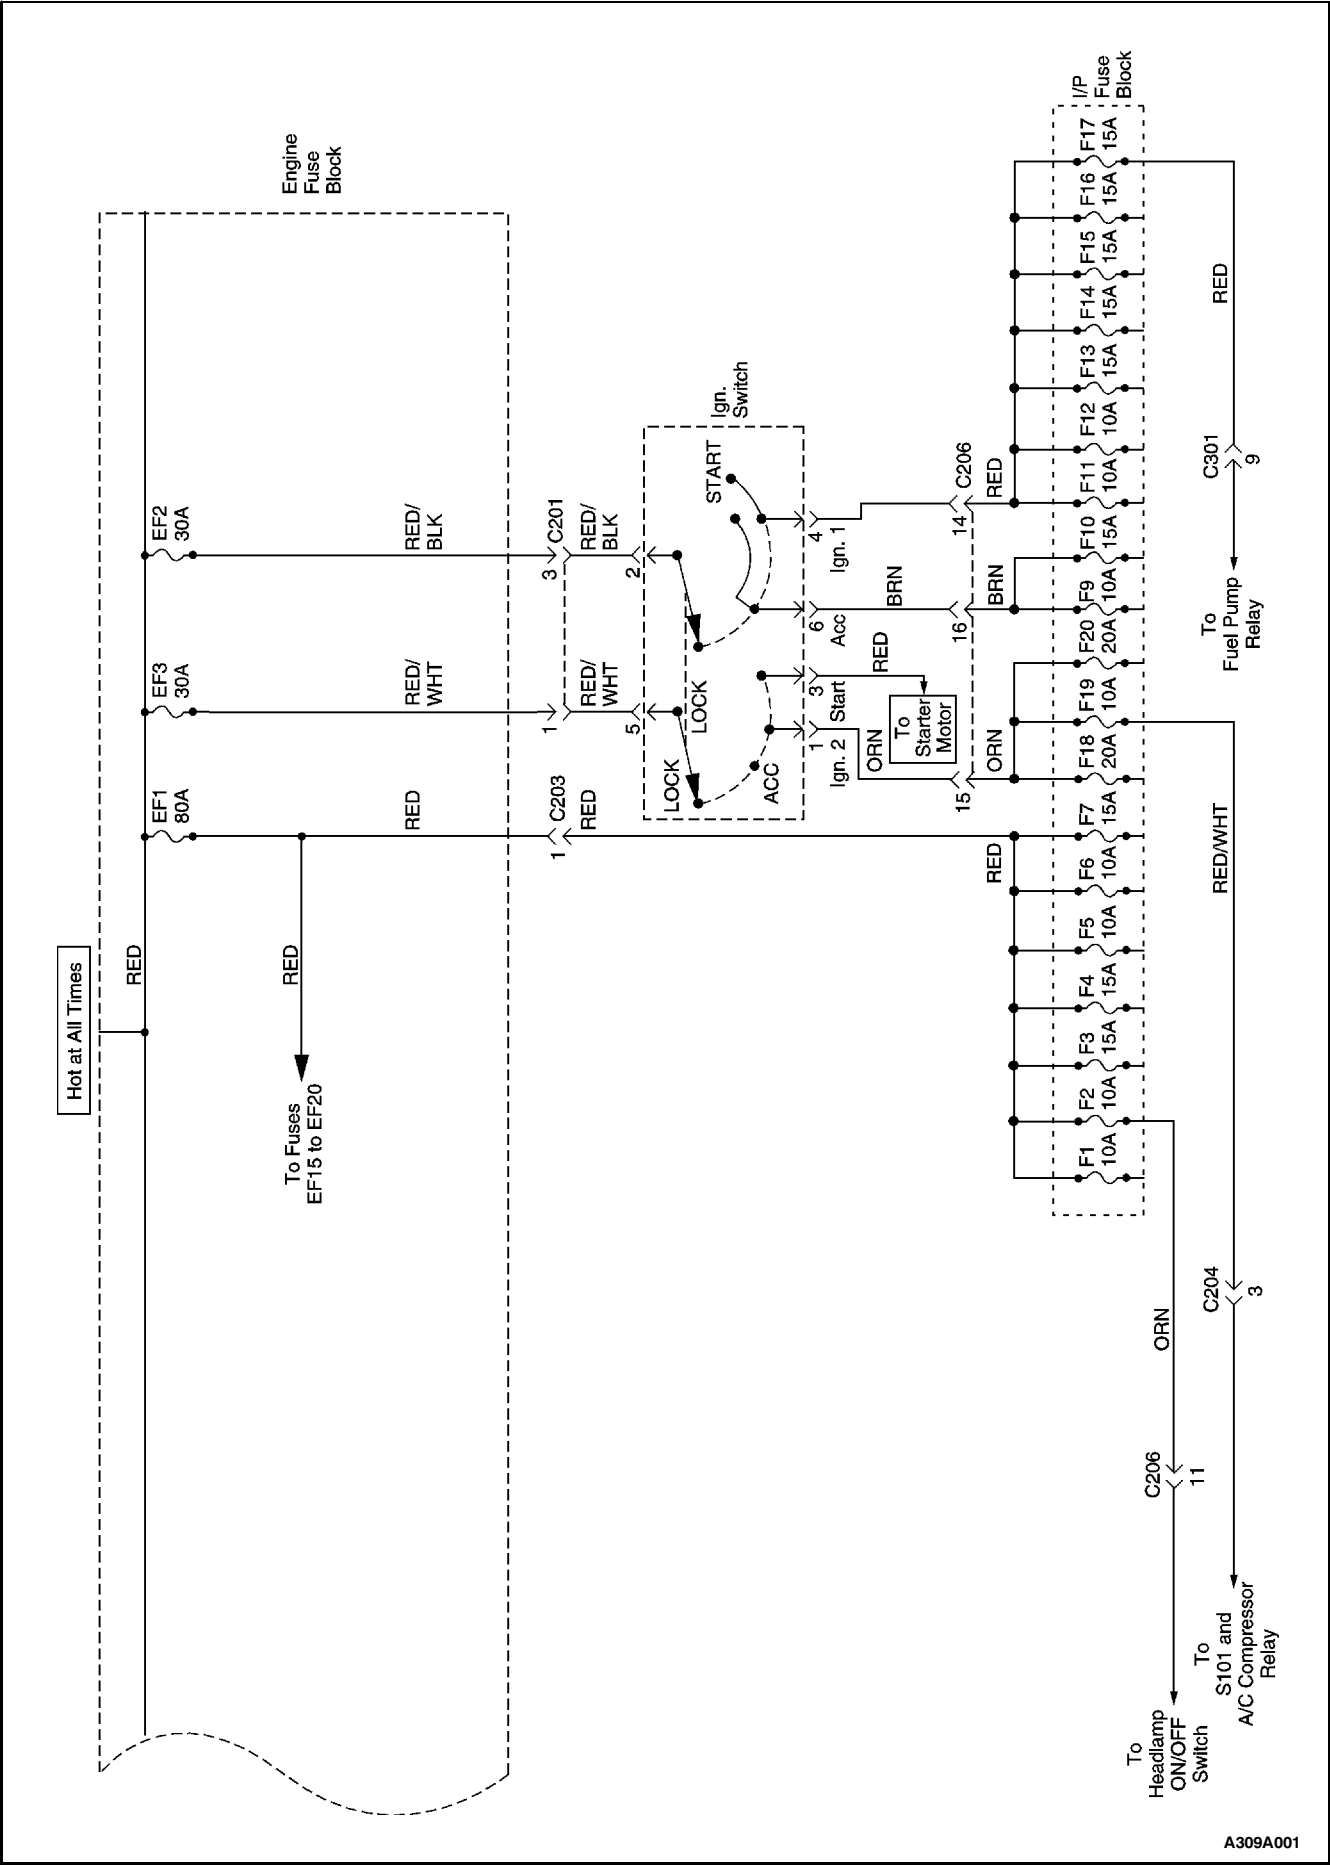


A309A001

POWER DISTRIBUTION SCHEMATIC (Cont'd)

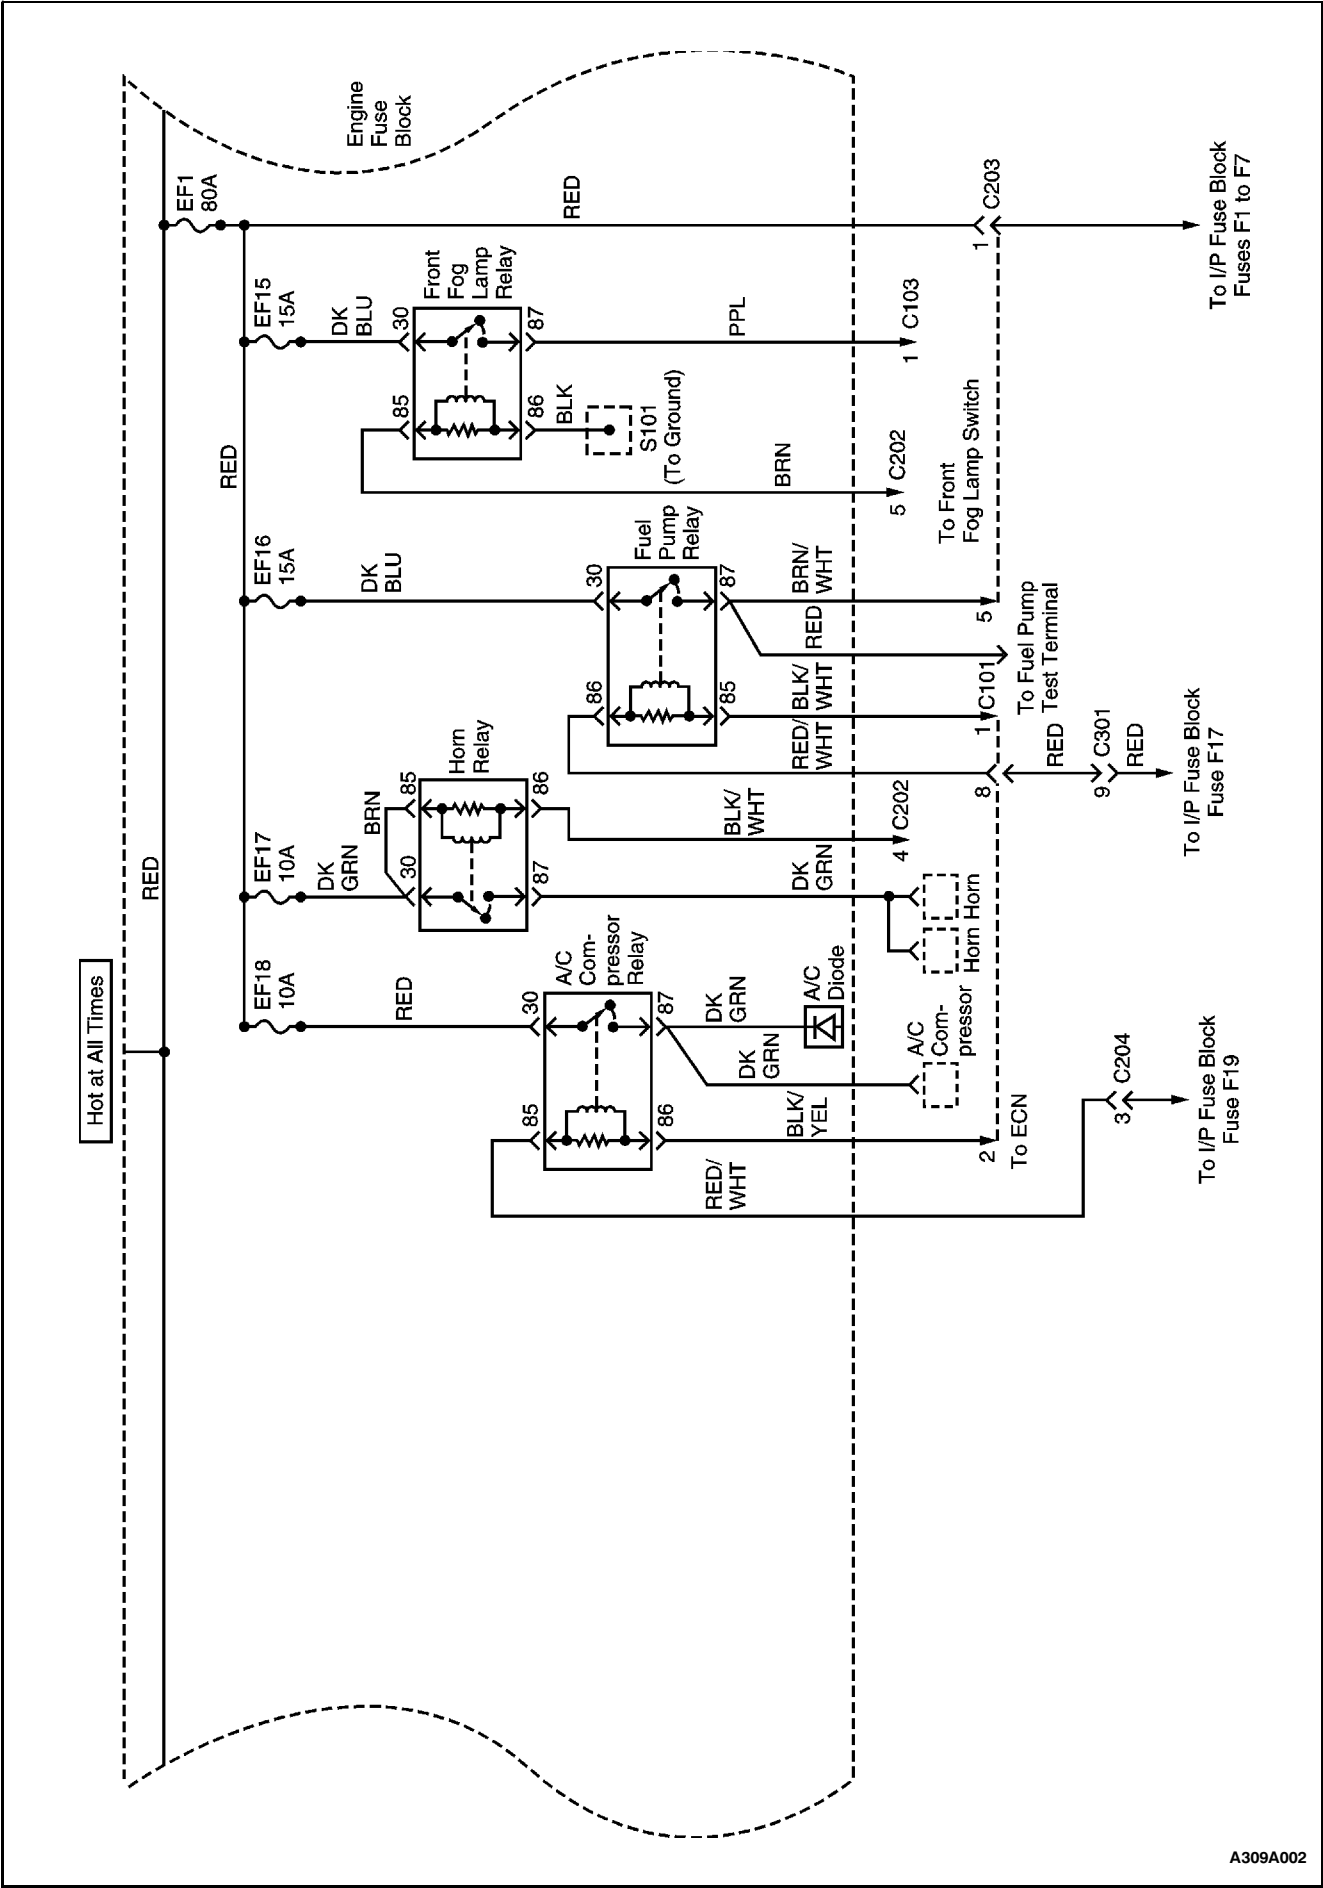


POWER DISTRIBUTION SCHEMATIC (Cont'd)

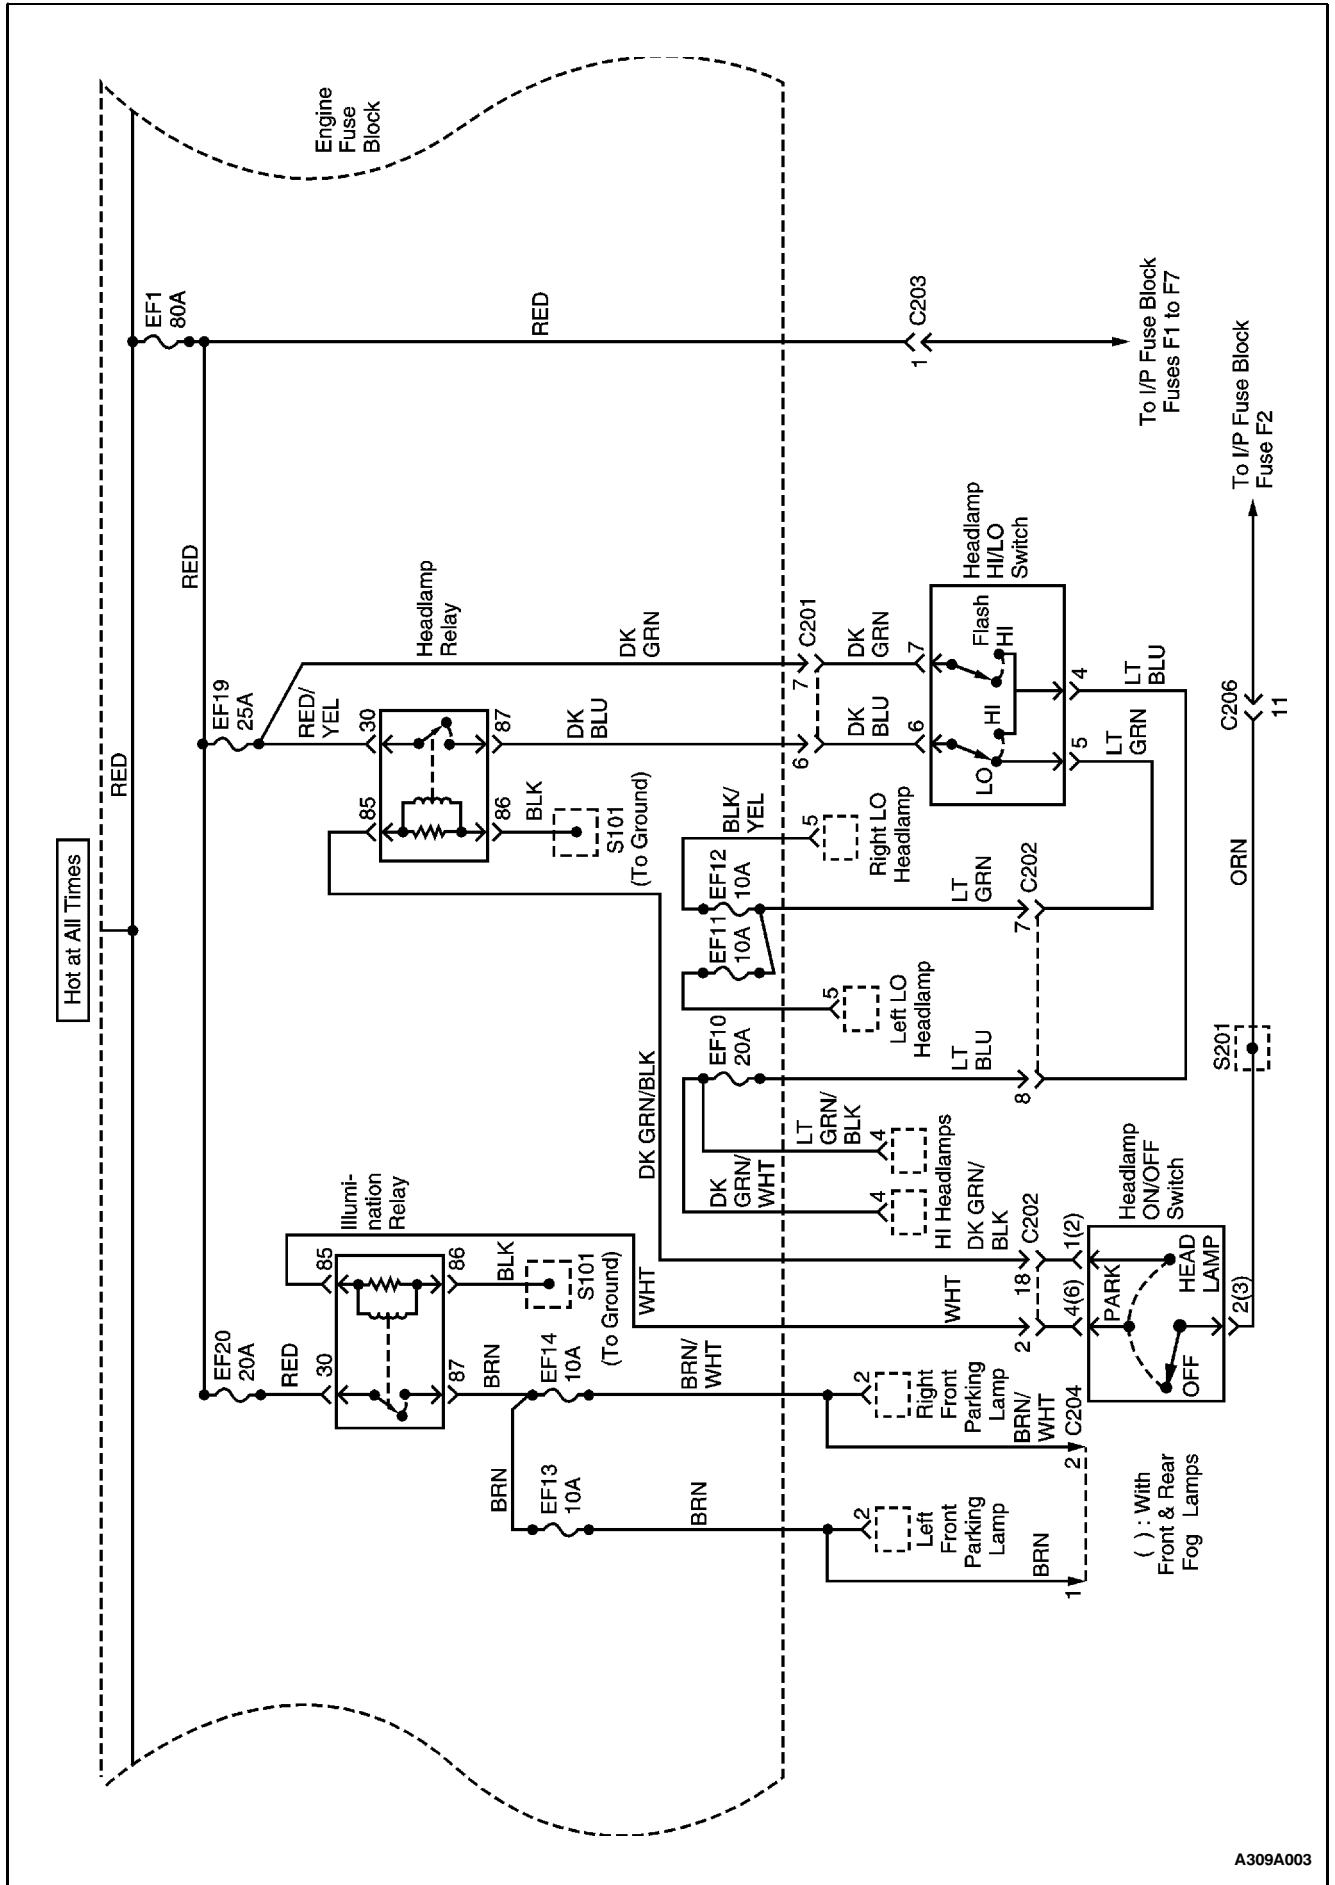


A309A003


POWER DISTRIBUTION SCHEMATIC (Cont'd)

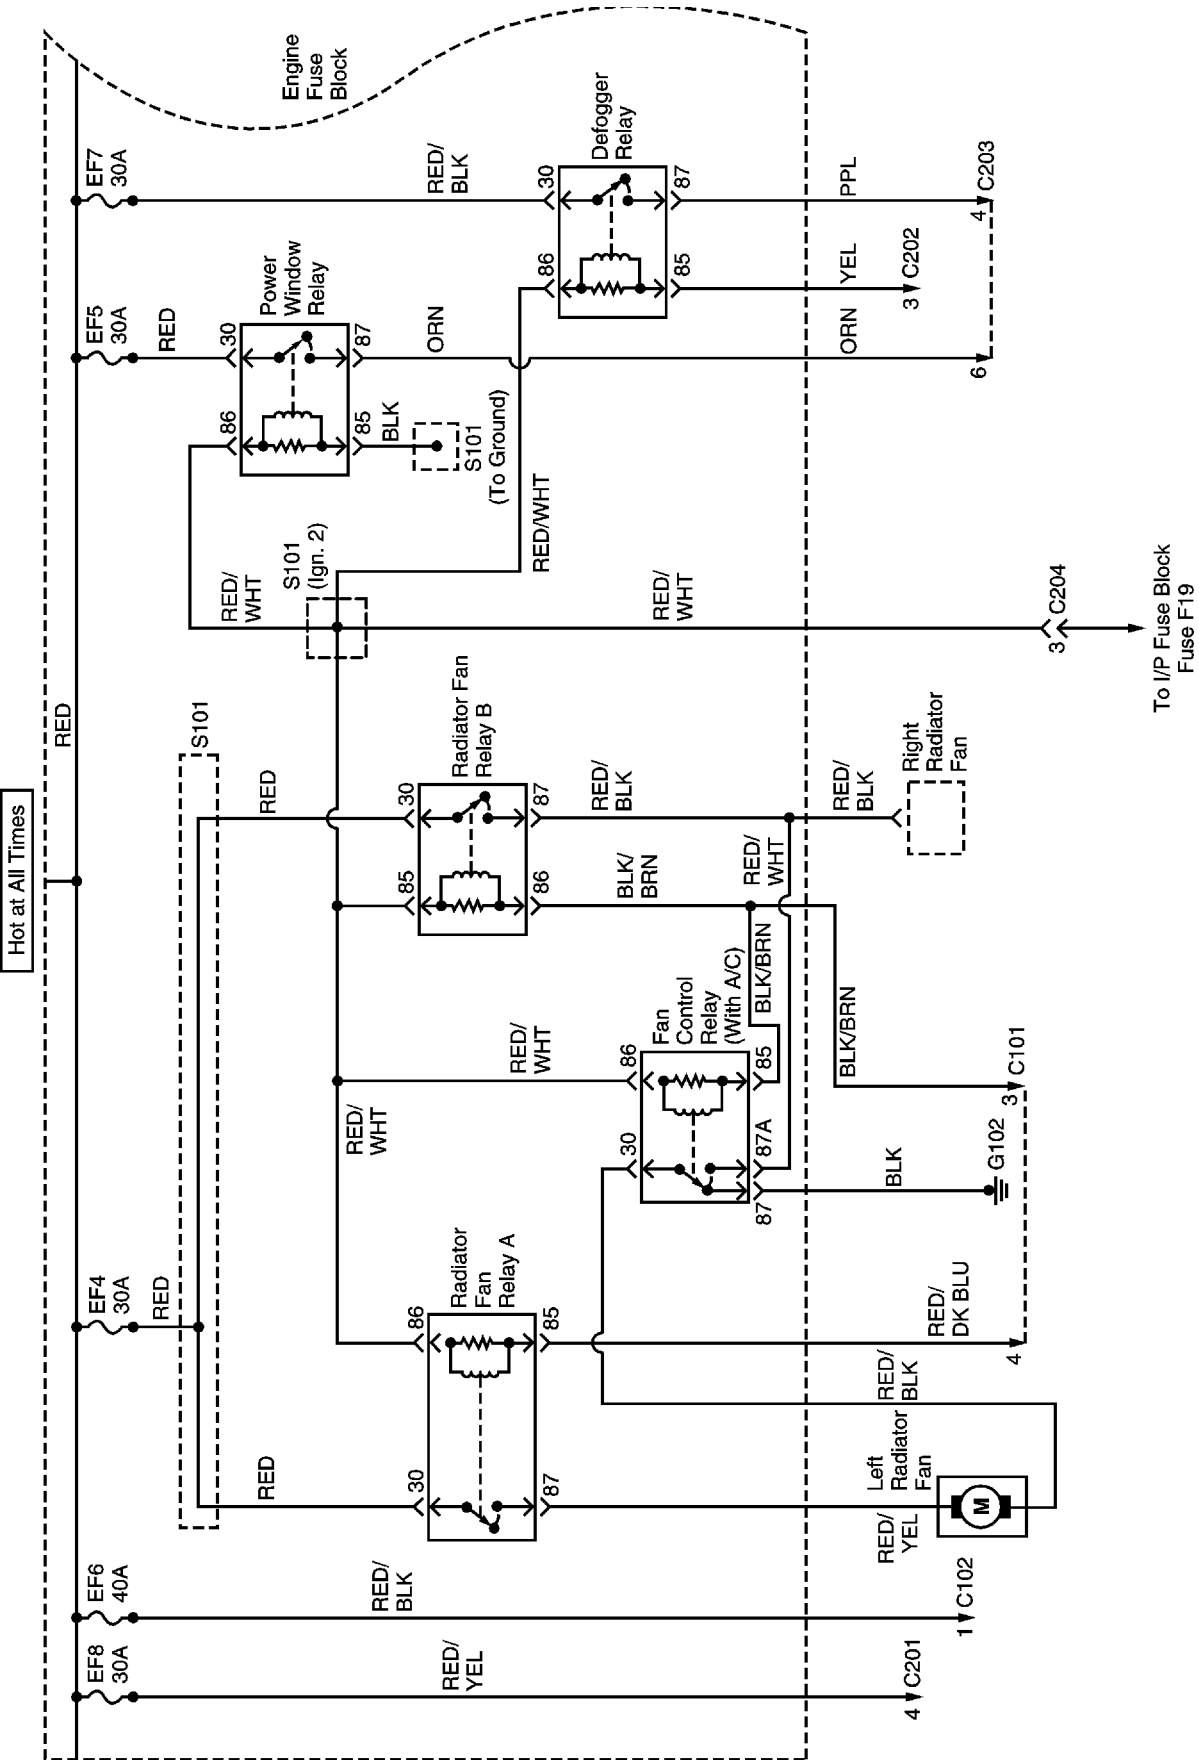

CONNECTION BOX HARNESS ROUTING

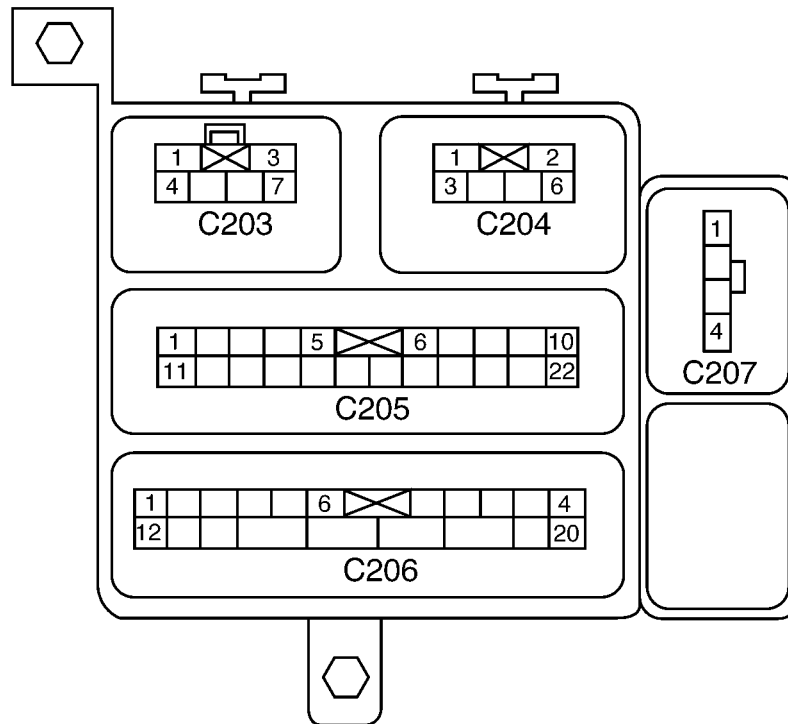


A209A002

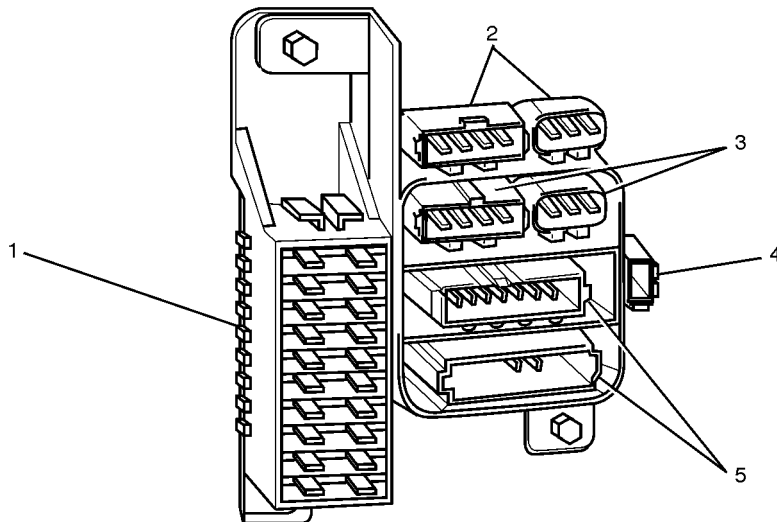


A109A005

- | | |
|---------------------------------------|---------------------------------------|
| 1 Fuse Block | 4 Floor Harness to Roof Harness |
| 2 Front Harness to Instrument Harness | 5 Floor Harness to Instrument Harness |
| 3 Floor Harness to Front Harness | |

FUSE BLOCK LOCATOR (ENGINE)

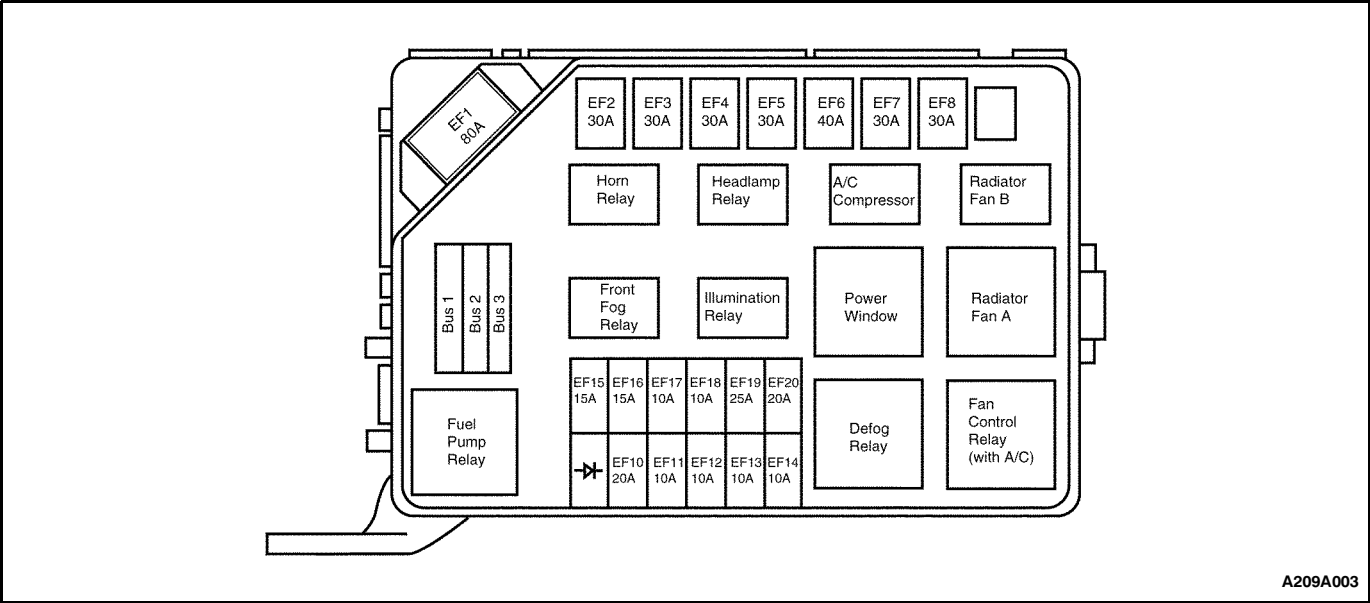

FUSE BLOCK LOCATOR (PASSENGER COMPARTMENT)

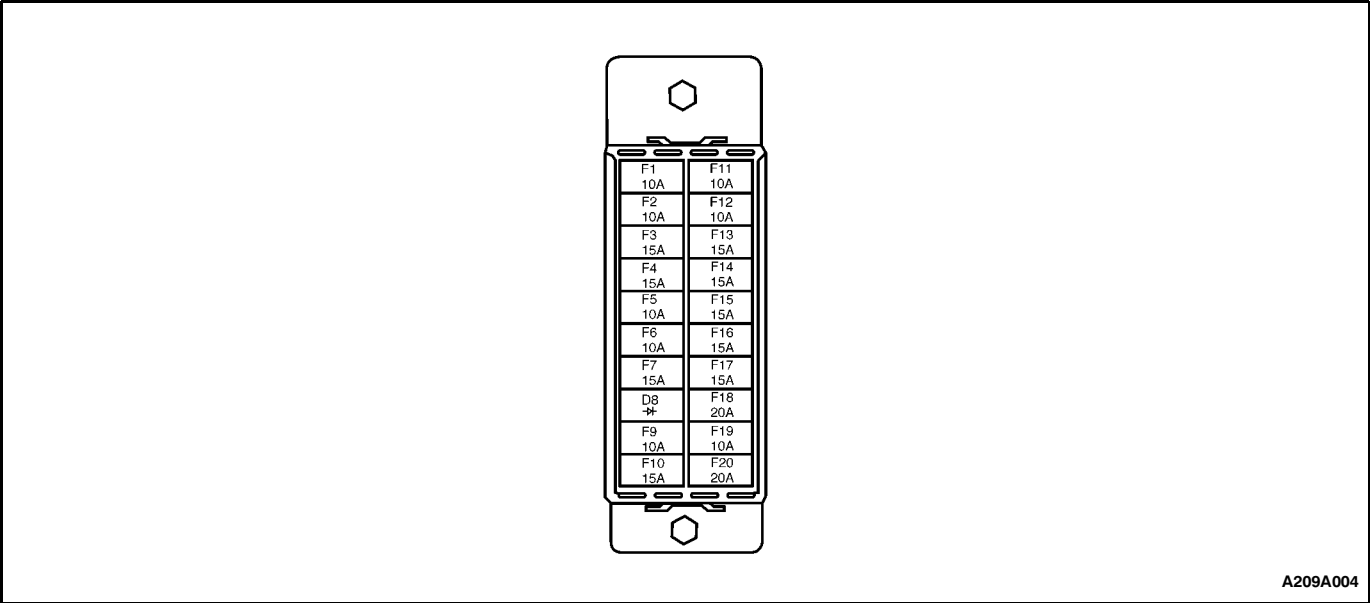


FUSE CHART

Fuse	Rating/ Source		Circuit
EF1 (Engine Fuse)	80A	BAT	Engine Fuses EF15 to EF20 and Fuses F1 to F7
EF2	30A	BAT	Ignition Switch, ACC (F9 and F10), and IGN 1 (F11 to F17)
EF3	30A	BAT	Ignition Switch, START and IGN 2 (F18, F19, F20)
EF4	30A	BAT	Radiator Fans
EF5	30A	BAT	Power Windows
EF6	40A	BAT	Antilock Brakes
EF7	30A	BAT	Rear Window Defogger
EF8	30A	BAT	Hi Blower
EF10	20A	EF19	Headlamp Hi Beam
EF11	10A	EF19	Headlamp Lo Beam (Left Side)
EF12	10A	EF19	Headlamp Lo Beam (Right Side)
EF13	10A	EF20	Tail and Illumination Lamps (Left Side), Headlamp Leveling, Rear Fog Lamps
EF14	10A	EF20	Tail and Illumination Lamps (Right Side)
EF15	15A	EF1	Front Fog Lamp
EF16	15A	EF1	Fuel Pump
EF17	10A	EF1	Horn
EF18	10A	EF1	A/C Compressor
EF19	25A	EF1	Hi Beam Passing
EF20	20A	EF1	Illumination Lamp
F1 (Fuse)	10A	EF1	Rear Fog, Room Lamp, Trunk Room Lamp
F2	10A	EF1	Clock, Door Open Warning, ALDL, Headlamp Relay, Illumination Lamp Relay, Engine Immobilizer
F3	15A	EF1	Hazard Lamp
F4	15A	EF1	Door Lock
F5	10A	EF1	ABS, ECM, TCM
F6	10A	EF1	Audio, Antenna Motor
F7	15A	EF1	Stoplamp, Center High-Mounted Stoplamp
D8 (Diode)			
F9	10A	ACC	Audio
F10	15A	ACC	Cigar Lighter
F11	10A	IGN 1	Instrument Cluster, Clock, Defog Relay, Seat Belt Switch, Engine Immobilizer
F12	10A	IGN 1	Backup Lamp
F13	15A	IGN 1	Supplemental Inflatable Restraints
F14	15A	IGN 1	Injectors, Alternator, Starter Solenoid, Transaxle Solenoids, Vehicle Speed Sensor, Tachometer, Canister Purge Solenoid
F15	15A	IGN 1	DIS Ignition Coil
F16	15A	IGN 1	Turn Signal Lamp, Mirror Switch
F17	15A	IGN 1	ECM, TCM, ABS Warning Lamp, Fuel Pump Relay, Variable Induction Geometry Solenoid
F18	20A	IGN 2	Wiper/Washer
F19	10A	IGN 2	Power Window Relay, A/C Compressor Relay, Radiator Fan Relays, Defog Relay, ABS Relay
F20	20A	IGN 2	Blower Position 1,2,3


FRONT HARNESS ROUTING

(Left-Hand Drive Shown, Right-Hand Drive Similar)

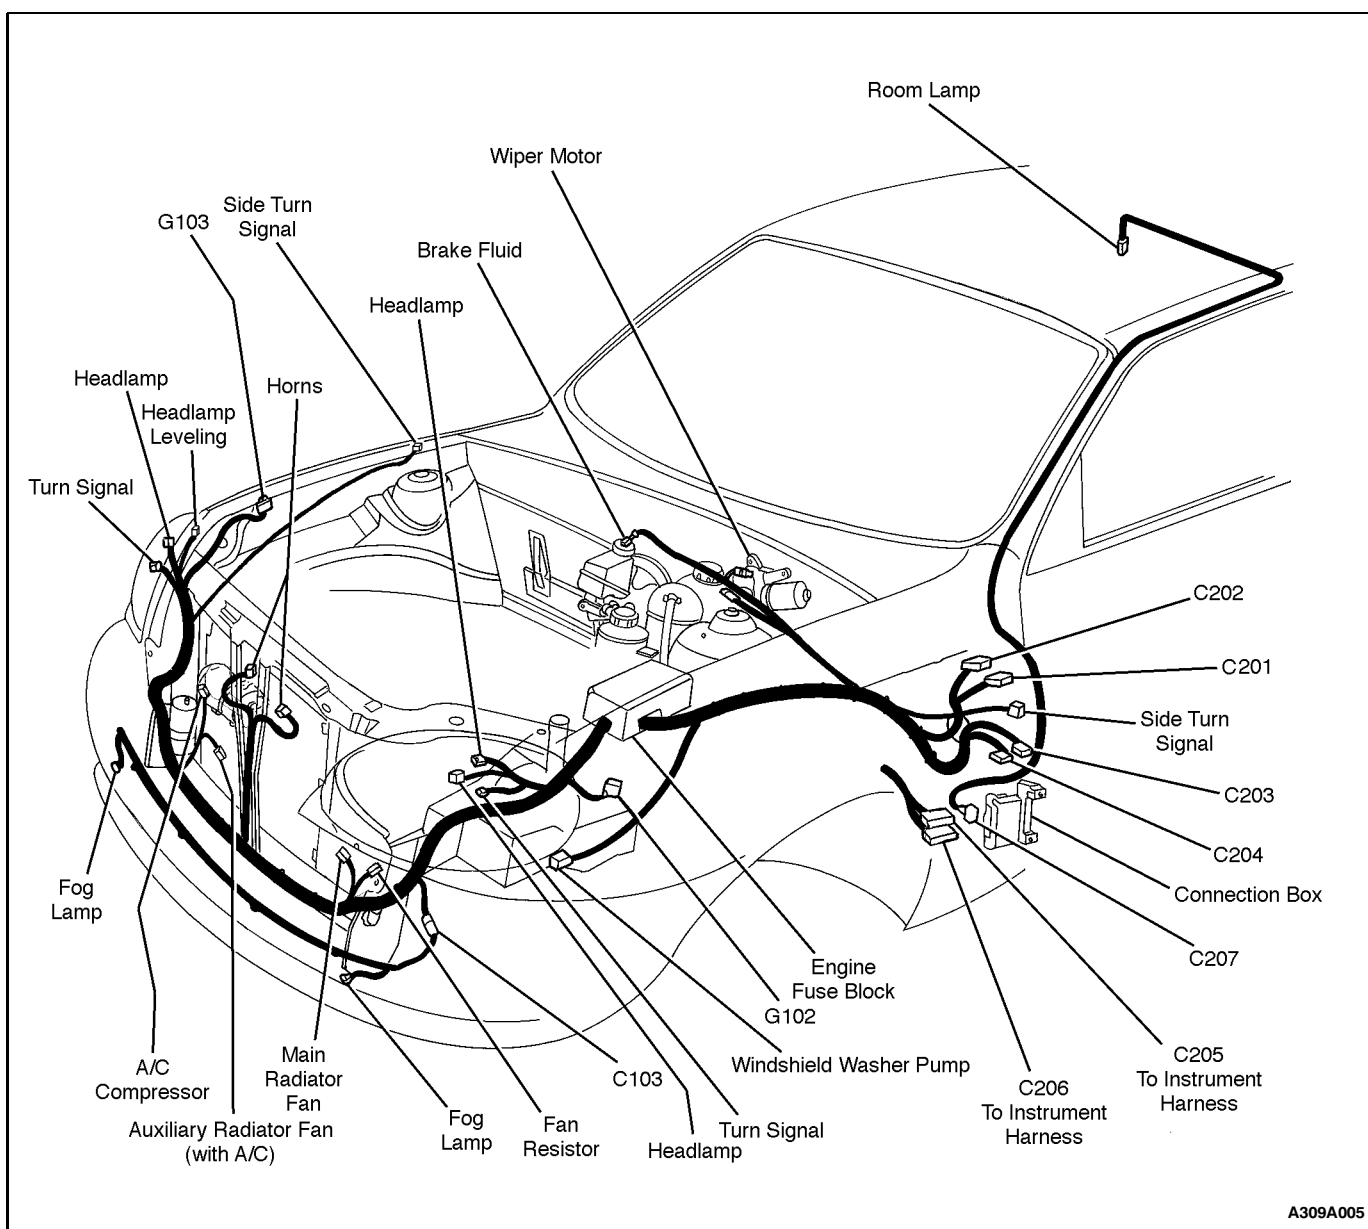


A309A005

REAR HARNESS ROUTING

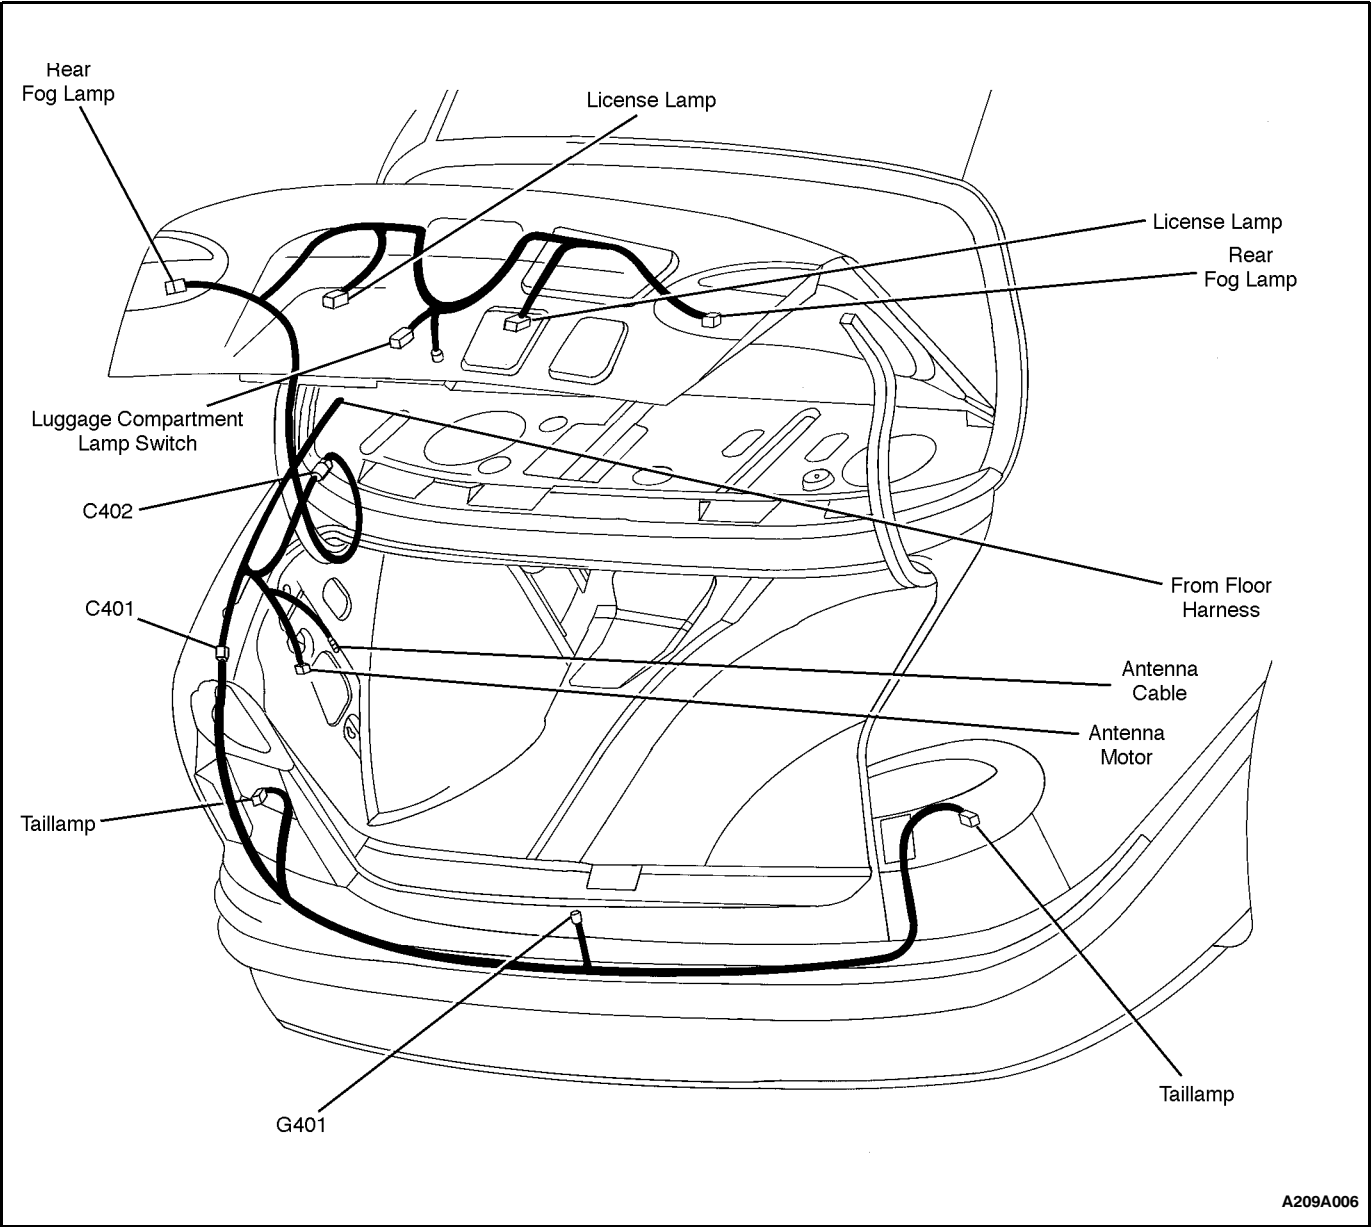


A209A006

FLOOR HARNESS ROUTING

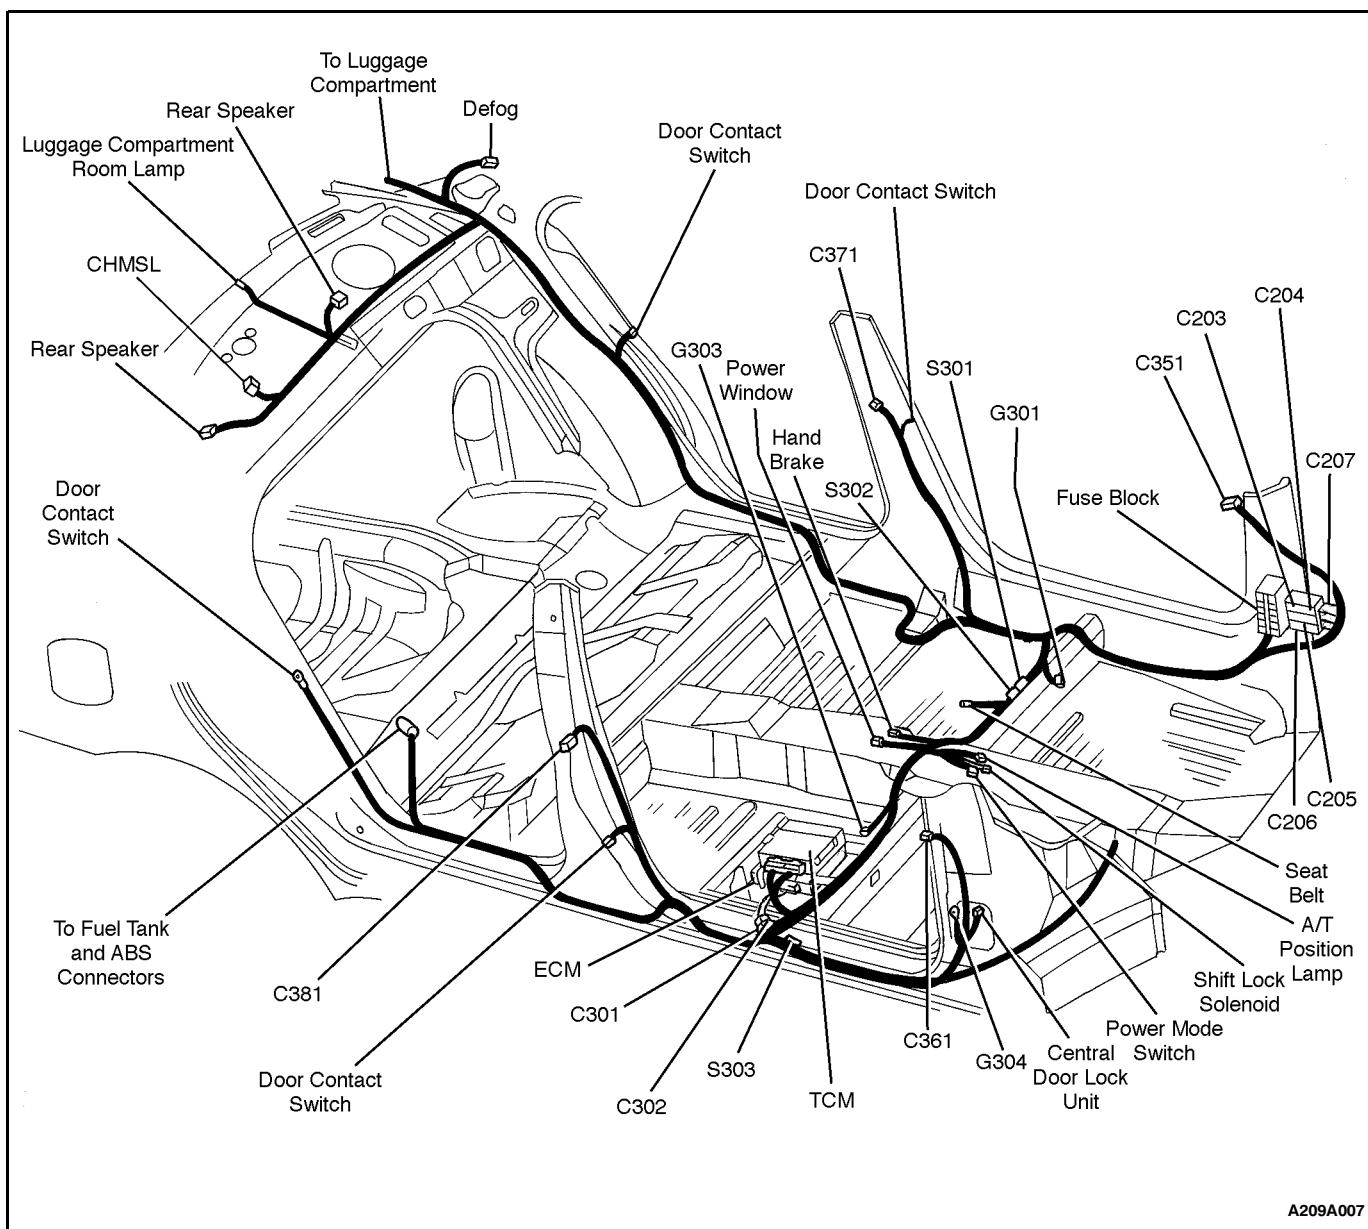


A209A007

LEFT-HAND DRIVE INSTRUMENT HARNESS ROUTING

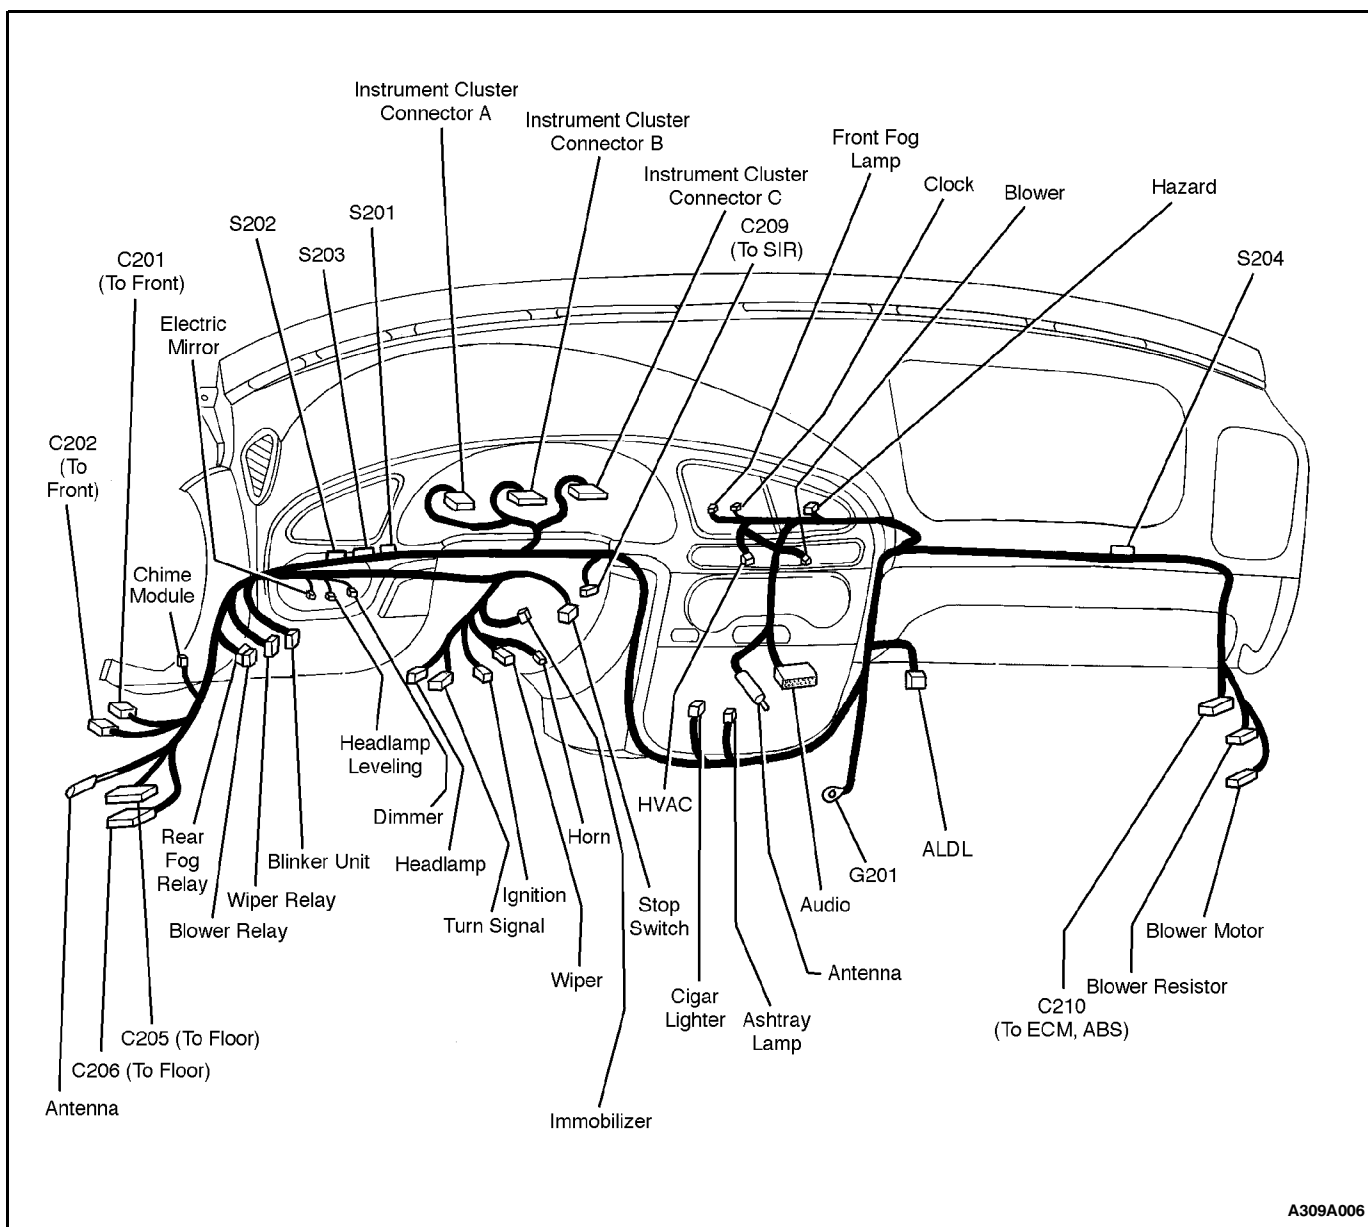

A309A006

RIGHT-HAND DRIVE INSTRUMENT HARNESS ROUTING

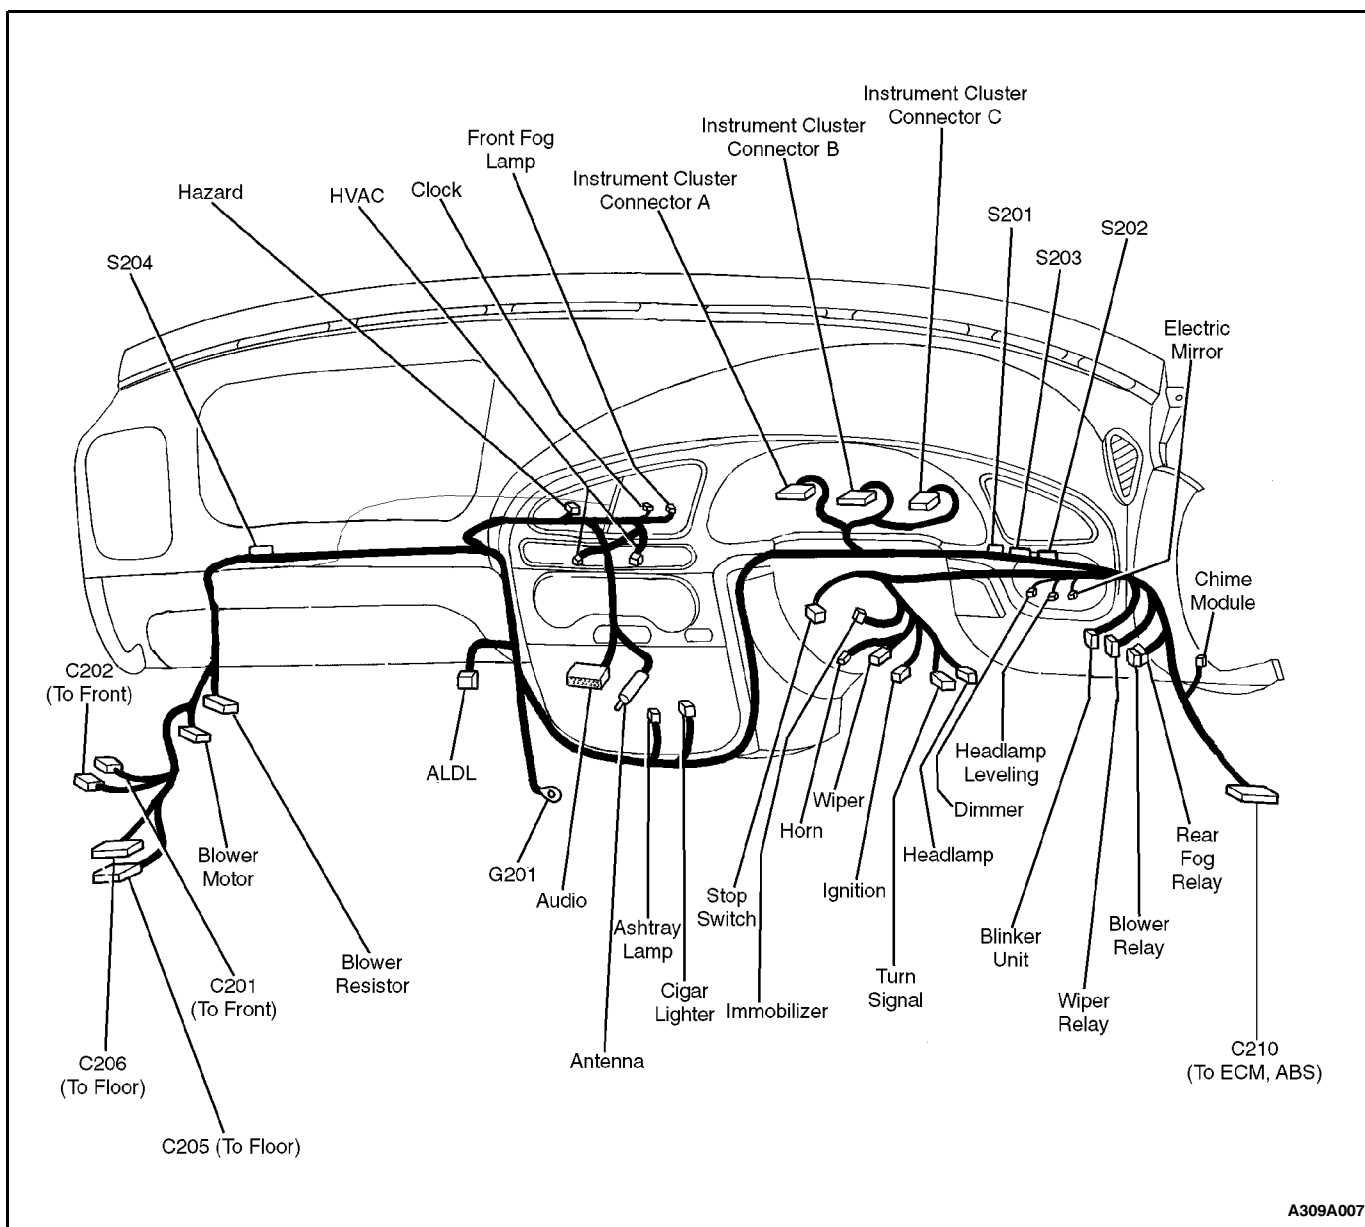

A309A007

DOOR HARNESS ROUTING

