

---

# SECTION 9M

## EXTERIOR TRIM


### TABLE OF CONTENTS

|  |      |   |      |
|--|------|---|------|
| Specifications .....                     | 9M-1 | B-Pillar Molding (Three-Door Hatchback) ..... | 9M-2 |
| Fastener Tightening Specifications ..... | 9M-1 | Roof Molding .....                            | 9M-3 |
| Maintenance and Repair .....             | 9M-2 | General Description and System                |      |
| On-Vehicle Service .....                 | 9M-2 | Operation .....                               | 9M-4 |
| B-Pillar Molding (Notchback and          |      | Emblems and Lettering .....                   | 9M-4 |
| Five-Door Hatchback) .....               | 9M-2 | Mud Guards .....                              | 9M-4 |

### SPECIFICATIONS

#### FASTENER TIGHTENING SPECIFICATIONS

| Application             | N•m | Lb-Ft | Lb-In |
|-------------------------|-----|-------|-------|
| B-Pillar Molding Screws | 1.5 | -     | 13    |
| Front Mud Guard Screws  | 1.5 | -     | 13    |
| Rear Mud Guard Screws   | 1.5 | -     | 13    |

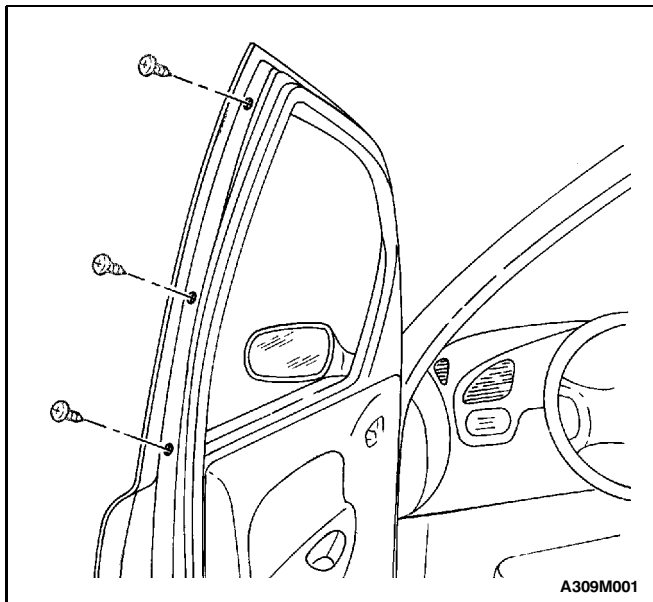

## MAINTENANCE AND REPAIR

### ON-VEHICLE SERVICE

#### B-PILLAR MOLDING (NOTCHBACK AND FIVE-DOOR HATCHBACK)

##### Removal Procedure


1. Move the weatherstrip aside in order to access the screws.
2. Remove the screws and the B-pillar molding.

##### Installation Procedure

1. Install the screws and the B-pillar molding.

##### Tighten


Tighten the B-pillar molding screws to 1.5 N•m (13 lb-in).

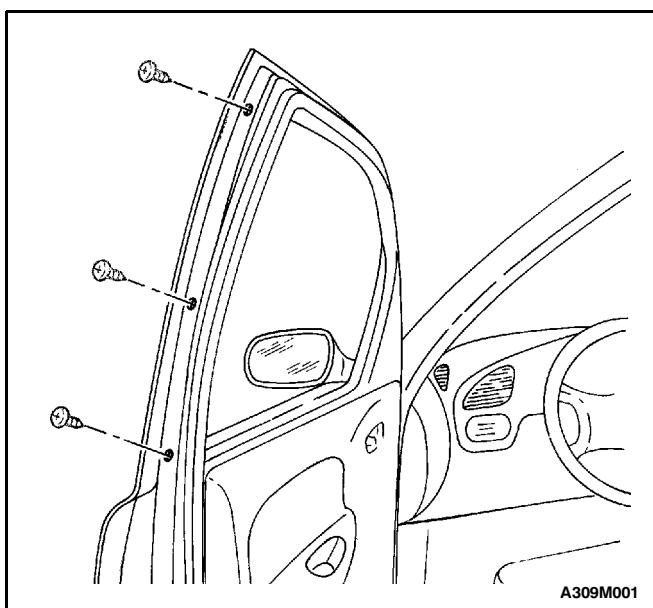


#### B-PILLAR MOLDING (THREE-DOOR HATCHBACK)

##### Removal Procedure

1. Remove the front seat belt height adjuster. Refer to Section 8A, Seat Belts.
2. Remove the screws and the B-pillar molding.

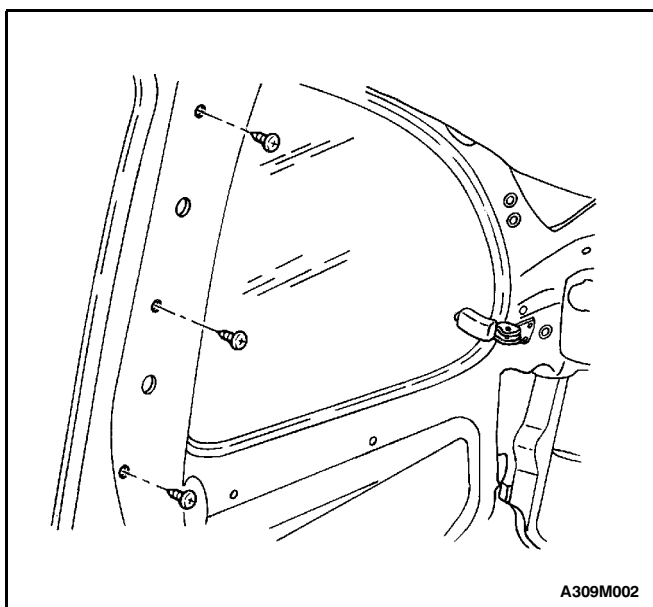

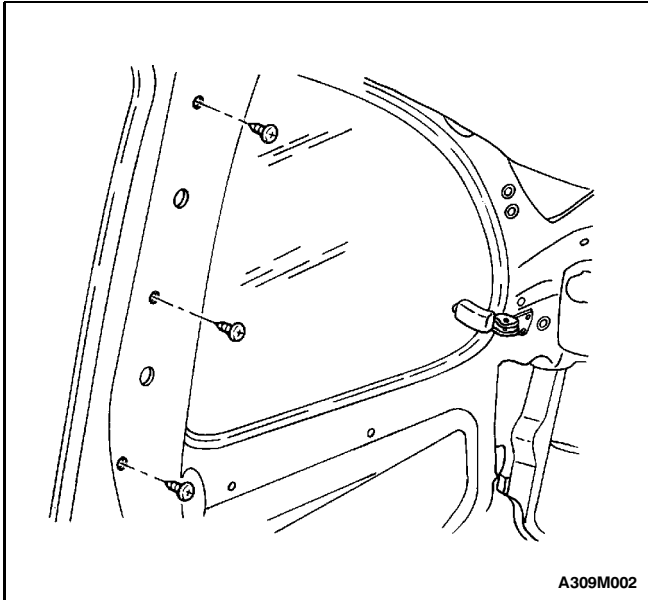


### Installation Procedure

1. Install the B-pillar molding with the screws.

#### Tighten

Tighten the B-pillar molding screws to 1.5 N•m (13 lb-in).


2. Install the front seat belt height adjuster. Refer to Section 8A, Seat Belts.

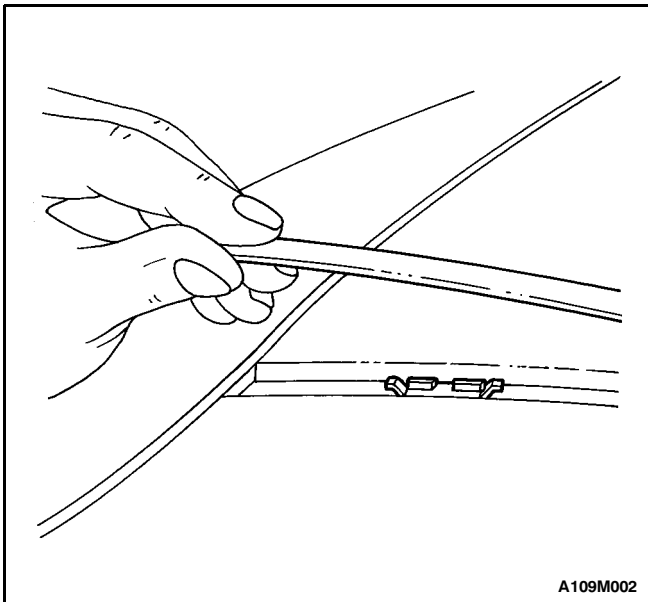

### ROOF MOLDING

#### Removal Procedure

1. Remove the roof molding from the plastic clips.

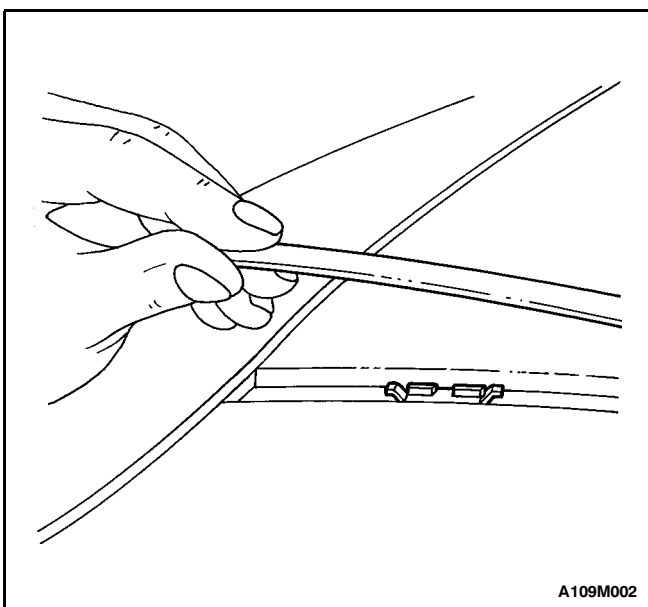

#### Installation Procedure

1. Press the roof molding onto the plastic clips.

## **GENERAL DESCRIPTION AND SYSTEM OPERATION**

### **EMBLEMS AND LETTERING**

The emblems and lettering on the vehicle are attached by adhesive. The company emblem appears on the hood. The lettering, which appears in several places on

the body of the vehicle, features the model, the grade, and the company name.

### **MUD GUARDS**

Front and rear mud guards are optional equipment on all models. Mud guards will help prevent an excessive buildup of mud on the body.